PR	E-FLIGHT	
1.	Documents	CHECK
2.	Cabin Check	COMPLETE
3.	Cockpit Check	COMPLETE
4.	Pre-Flight Inspection	COMPLETE
5.	Passengers	
ST	ART	
1.	Brakes	HOLD
2.	Master	
3.	Beacon	· · ·
4.	Carb Heat	
- . 5.	Throttle	
5. 6.	Mixture	•
7.	Fuel	
7. 8.	Primer	
	Propeller Area	
9.		
10.	Ignition	START
<u>AF</u>	TER START	
1.	Throttle	
2.	Oil Pressure	- CHECK within 30sec
3.	Flaps	UP
4.	Avionics	ON
5.	Time START	NOTED
RII	NUP	
1.	Throttle	1700 RPM
2.	Oil Temp. and Press	
3.	Vacuum	
4.	Alternator	
5.	Magnetos	
6.	Carburetor Heat	
7.	Mixture	
8.	Throttle	
9.	Throttle	
-		
	FORE TAKEOFF	OFOUR
1.	Seats/Belts/Doors	
2.	Flight Controls	
3.	Instruments	
4.	Engine Gauges	
5.	Primer	
6.	Magnetos	
7.	Carb Heat	
8.	Mixture	
9.	Flaps	
	Trim	
	Fuel	
12.	Departure	BRIEFED
LIN	IE-UP	
1.	Flight Tracking	WHEELS UP
2.	Time UP	
3.	Instruments	
4.	Lights	
т. 5.	Transponder	
		,·

BEFORE LANDING	
	SECURE
2. Downwind Checks	COMPLETE
AFTER LANDING	
	OFF
	UP
	OFF
4. Transponder	STBY
5. Time DOWN	NOTED
6. Flight Tracking	ARRIVED at DESTINATION
<u>SHUTDOWN</u>	
1. Avionics	OFF
2. Magnetos	DEAD CHECK
	IDLE CUT-OFF
	OFF
5. Master	OFF
6. Time Stop	NOTED
7 Aircraft	SECLIDE

AIRCRAFT SUMMARY					
WEIGHTS (lbs.)	AIRSPEEDS (KIAS)				
GTOW 1600					
Bagg. 1 120	Vne141				
Bagg. 2 40	Vno 107				
Max. total baggage is	Va 97				
120	Vfe85				
	Vx 56				
Fuel (US gal.)	Vy 68				
Total26	Vs 48				
Usable22.5	Vso42				
	Best Glide 60				
	Vref (0 flap) 60-70				
	Vref (40 flap) 50-60				
	· ·				

EMERGENCY PROCEDURES

ENGINE FAILURE DURING TAKEOFF ROLL		ENGINE FIRE IN FLIGHT	(
Throttle	IDLE	Mixture	
Brakes	APPLY	Fuel Selector	OFF
Flaps	RETRACT	Cabin Air/Heat	CLOSED
Mixture		Airspeed INC	
Magnetos		FORCED LANDING	g
Master		I ONOED EANDING	
Master			
ENGINE FAILURE AFTER TAKEOFF		ENGINE FIRE DURING START	(
Airspeed 60/55 KIAS FLA	A DE LIDIDOWN	Starter	- CONTINUE CRANKING
Control SELECT I		IF ENGINE STARTS:	
Carb Heat		Throttle	1700 RPM
Carb Heat	ON	Mixture	
A T' D ''		SECURE ENGINE	
As Time Permits:	IDI E OLIT OFF		
Mixture		IF ENGINE FAILS TO START:	
Fuel Selector		Throttle	
Magnetos		Mixture	
Flaps		Starter	- CONTINUE CRANKING
Master		SECURE ENGINE	
Doors	AJAR	SECURE ENGINE:	
		Master	OFF
ENGINE FAILURE IN FLIGHT		Magnetos	
Airspeed		Fuel Selector	
Carb Heat	ON	Fire ExtinguisherOBTA	
Mixture	_	Fire ExtinguistierOBTA	IIIN AIIU EXTINGUISH FIRE
Fuel Selector	ON		
Control SELECT I	ANDING SITE	ELECTRICAL or CABIN FIRE IN FL	
Cause Check		Master Switch	
Engine/Fuel Gauges	CHECK	All Radio/Electrics	
Primer	LOCKED	Vents/Cabin Air/Heat	
Magnetos	VARY	Fire Extinguisher	
Throttle		Cabin	VENTILATE
	VAN I		
Mixture			
	VARY	IF FIRE IS OUT AND ELECTRICAL	IS REQUIRED FOR FLIGHT
Mixture MagnetosSTART (if propel FORCED LANDING	VARY	Circuit Breakers	-CHECK, DO NOT RESET
MagnetosSTART (if propel	VARY		-CHECK, DO NOT RESET
MagnetosSTART (if propel FORCED LANDING	VARY	Circuit Breakers	-CHECK, DO NOT RESET
MagnetosSTART (if propell FORCED LANDING FORCED LANDING	VARY ler is stopped)	Circuit Breakers Master Switch	-CHECK, DO NOT RESET
MagnetosSTART (if propell FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped) 7700	Circuit Breakers Master Switch	-CHECK, DO NOT RESET
MagnetosSTART (if propell FORCED LANDING FORCED LANDING Squawk CodeEmergency	VARY ler is stopped) 7700	Circuit Breakers Master Switch Radio/Electrics EXCESSIVE RATE OF CHARGE	-CHECK, DO NOT RESET ON ON AS REQUIRED
MagnetosSTART (if propell FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped) 7700 121.5 BRIEF	Circuit Breakers Master Switch Radio/Electrics EXCESSIVE RATE OF CHARGE OVER-VOLTAGE LIGHT ILLUMINAT	-CHECK, DO NOT RESET ON ON AS REQUIRED
MagnetosSTART (if propell FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped) 7700 121.5 BRIEF IDLE CUT-OFF	Circuit Breakers	-CHECK, DO NOT RESETONON AS REQUIRED ED
MagnetosSTART (if propell FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped) 7700 121.5 BRIEF IDLE CUT-OFF OFF	Circuit Breakers	-CHECK, DO NOT RESETONON AS REQUIRED EDOFF
MagnetosSTART (if propel FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFF	Circuit Breakers	ED OFF
MagnetosSTART (if propell FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFFOFF	Circuit Breakers	ED OFF
MagnetosSTART (if propell FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFFOFFOFF	Circuit Breakers	EDOFFONOFFOFFOFFON
MagnetosSTART (if propell FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFF -AS REQUIREDSECURE	Circuit Breakers	EDOFFONOFFOFFOFFON
MagnetosSTART (if propell FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFF -AS REQUIREDSECURE	Circuit Breakers	EDOFFONOFFOFFOFFON
MagnetosSTART (if propel FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFF -AS REQUIREDSECURE	Circuit Breakers	EDOFFONOFFOFFOFFON
MagnetosSTART (if propell FORCED LANDING FORCED LANDING Squawk Code	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFFOFFOFFSECURESECURE	Circuit Breakers	EDONONON AS REQUIRED EDOFFONONON
Magnetos	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFFOFFOFFOFF	Circuit Breakers	ED CHECK, DO NOT RESET CHECK, DO NOT RESET CHECK IN CHECK IN CHECK OFF CHECK OFF CHECK OFF CHECK OFF
Magnetos	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFFOFFOFFOFFSECUREAJAR	Circuit Breakers	ED OFF OFF OFF OFF
Magnetos	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFFOFFOFFOFFSECUREAJAR	Circuit Breakers	ED OFF OFF OFF OFF
Magnetos	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFFOFFOFFOFFSECURESECUREONON	Circuit Breakers	ED OFF OFF OFF OFF
Magnetos	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFFOFFOFFOFFOFFSECURESECUREONCHECK	Circuit Breakers	ED OFF OFF OFF OFF
Magnetos	VARY ler is stopped)7700121.5BRIEF IDLE CUT-OFFOFFOFFOFFOFF	Circuit Breakers	ED OFF OFF OFF OFF

Mixture-----VARY